



Suma[®] Optifill^{™/MC}

Dilution Control System for 3 Compartment Sinks


Supplies Needed



Suma[®] Supreme^{™/MC}
Pot and Pan Detergent



Final Step^{™/MC}
Sanitizer



Put on appropriate
PPE as stated on the
product label and SDS.



QT-40
Test Strips

IMPORTANT:

- Date mark detergent and sanitizer bottles with date of installation
- Use same bottle until empty before priming new bottle
- There should be a 4–8 in (10–20 cm) clearance between bottom of faucet and top of unit
- There should be a flow rate of 4–8 gpm for optimum performance
- First time usage: Prime unit (30-45 seconds)

Detergent and Sanitizer Procedures



1 Inspect and clean sink of biofilm using green scrub pad. Place stopper in drain.



2 WASH with Suma Supreme in 110°F. Verify temperature with stem thermometer.



3 RINSE off detergent with clean, hot water.




4 SANITIZE with Suma Final Step at 75°F (room temperature) for at least 60 seconds.

NOTE: If there's only a 2 bay sink, use a dishpan as the first or WASH Sink


Sanitizer Test



1 Dispense Suma Final Step Sanitizer at room temperature for 60 seconds.

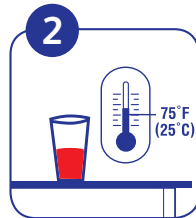

2 Allow foam to settle and cool to 75°F. Dip test strip for 10 seconds. Do not shake or swirl.

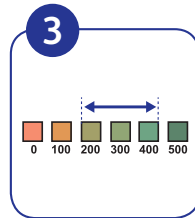

3 Compare to QT-40 test strip guide. Tape should read 200-400 ppm.

Testing must be done in a sanitizer solution that is clean, fresh and at room temperature. Prepare fresh solution at least daily or more often if use solution becomes visibly soiled.

Questions: 1-800-558-2332