

Application Procedures



Wear gloves.




Apply to floor.



Wait 15 minutes.



Wipe clean.

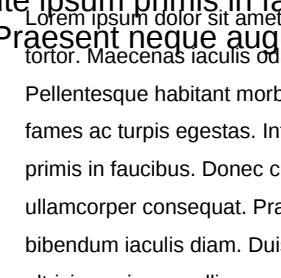

Questions: 1-800-558-2332

Always wear personal protective equipment.