




# Application Procedures

Use EasyMop Single-use Microfiber Mop for a clean tool every time for cleaning on all types of surfaces.

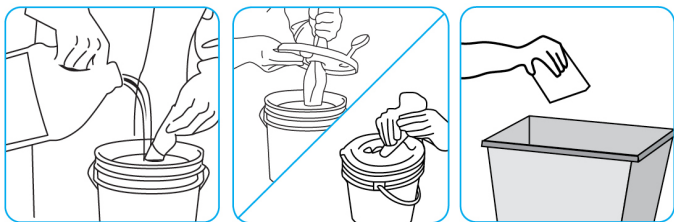

Remove bucket lid. Add 16 oz of disinfectant or cleaner solution to an empty EasyWipe System container. Place a new roll of EasyWipe wipes into the container to absorb the solution. After one minute for the initial solution to be absorbed, add an additional 48 oz of selected chemical solution (64 oz total) to container. Feed wipes from center of roll through lid opening. Close lid. Dispense wipe and clean surfaces. If wipe is too wet, squeeze excess on surface to be cleaned. Dispose of visibly soiled wipes. Dispense a new wipe when moving to clean a different surface.

Questions: 1-800-558-2332

Always wear personal protective equipment.